

Security Marking With Alpha•Dot


BEFORE YOU BEGIN - IMPORTANT

- Please read these instructions carefully, security marking with Alpha•Dot is not difficult, but requires a little thought and preparation.
- Alpha•Dot must be applied in dry conditions.
- Shake the dispenser vigorously for at least 30 seconds just before use.
- Practise first on a piece of white paper. The glue is water based, so you can wipe off any surplus with a damp cloth, but once dried, the mark is permanent.
- Ensure that all surfaces to be marked are free from liquids, dirt, grease, polish and wax for the best adhesive bond.
- Do not open the dispenser until you're ready to start. If you are going to keep the dispenser make sure you keep the top screwed tight. The shelf life is about two years.
- Apply warning labels in highly visible areas. The labels are not easily removed, so make sure you're happy with the position(s) that you choose.

Cars and vans are frequently stolen for their parts - Alpha•Dot allows police to identify the owner and prove theft.

Once your vehicle has been marked with 100s of uniquely identifiable microdots, a thief has to find and remove every single one to be safe from prosecution.


Eye-catching warning labels (supplied in this pack) warn the thief to leave your vehicle well alone!

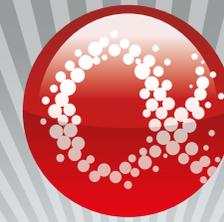

Alpha • Dot

Car/Small Van Marking Locations

This guide to locations is useful, but by no means definitive, please use your imagination, and don't apply Alpha•Dot to surfaces which might spoil the appearance of painted or polished surfaces.

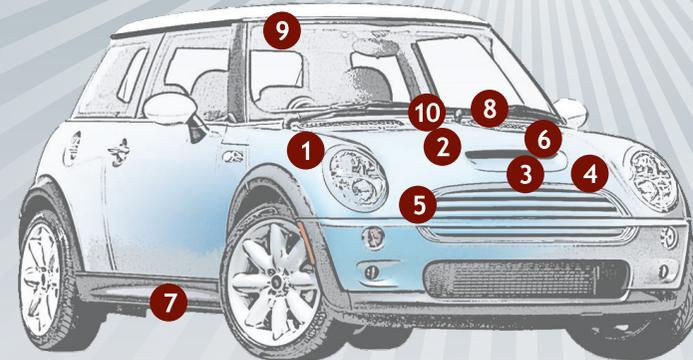

1. VIN plate
2. Fuel Injection unit
3. Engine
4. Alternator
5. Water pump
6. ECU
7. Floor pan
8. Glove box
9. Sun Visor
10. Under fuse cover

11. Interior trim
12. Under door seals
13. Alloy wheels
14. Jack
15. Under boot lid (near lock)
16. Bumpers
17. Light clusters
18. Fuel recess/cap

